


Play Anywhere. - Play NOW!

- Warning
 To be used for Soccer Tennis only
- Not a toy, do not climb on net
- Keep fingers away from hinges and joints
- Must be used with adult supervision

 


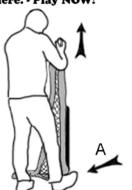


With ninges on the ground.
 Place foot on the rigth hinge (A)
 Extend frame up to 6'. (Click).
 Push left hinge down until it clicks




2. Swing open frame, placing one hinge on ground.




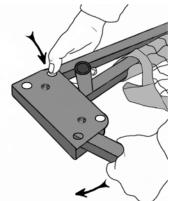


4. Depress buttons located in hinges and swing legs out

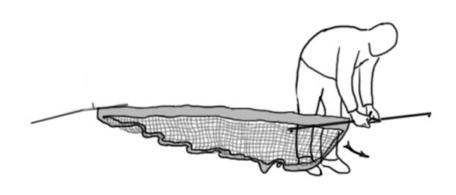

5. Repeat with all four legs

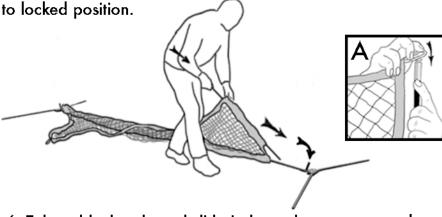

6. Take a black pole and slide it down the orange net sleeve. Placing the end into the frame tube. Loop the cord over the rod top (A) Repeat using remaining pole thru other sleeve.

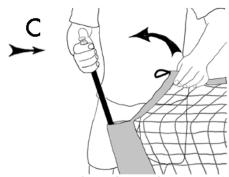

7. Grip Rod pushing direction (C) whilst pulling Orange sleeve up and looping Cord over Poll Top

1 year limited Manufactures Warranty on Manufacturing defects only.
30 day money back guarantee. For a full description of WarrantyGuarantee-Terms & Conditions. See www.thebownet.com

Triad Sports Group LLC.360 Cortez Circle Camarillo, California 93012 866.950.NETS