


Warning To be used for restrianing Soft/Base Balls only

Not a toy, do not climb on net


Must be used with adult supervision

 Must be either Staked or Weighted down using BowBags (not supplied)

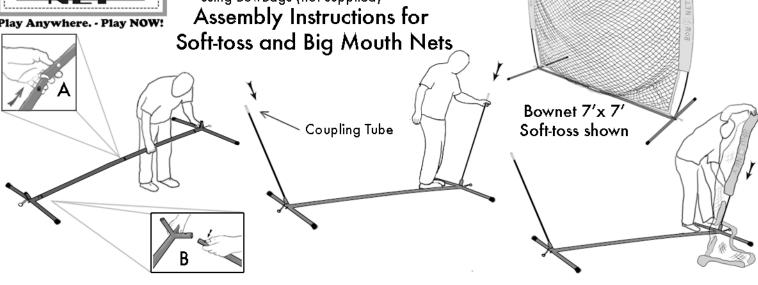

1. Join two straight Pipes together. Fig. A Then attach both end Legs. Fig. B

Install two lower Black Rods with 3. Thread Orange sleeve over Black Rod. Coupling Tubes up, in angled Pipes Make sure BowNet logo isn't up side down.

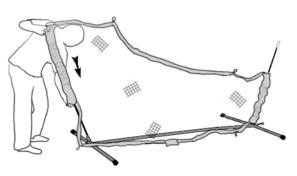


4. Repeat with Orange pocket over other Black Rod.



Rod Coupling Tubes.




5. Take Black Rod and slot into lower 6.Hold Black Rod pulling Orange sleeve up and loop White Cord over rod top See #8.

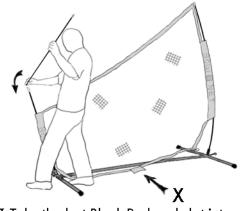

7. Take the last Black Rod and slot into Rod Coupling Tube.



8. Grip Black Rod pulling Orange sleeve up and loop Cord over Poll Top

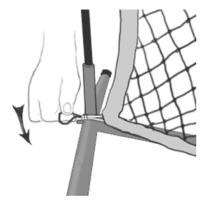

9. Take lower Black elastic loops and place under stud on both end legs .

10. Wrap Velcro (X in Fig 7) around frame

1 year limited Manufactures Warranty on Manufacturing defects only. 30 day money back guarantee. For a full description of Warranty-Guarantee-Terms & Conditions. See www.thebownet.com

Triad Sports Group LLC.360 Cortez Circle Camarillo, California 93012 866.950.NETS